




Failure to observe the below indications will impair the correct functioning of the equipment

THESE INDICATIONS ARE RECOMMENDED FOR ALL EQUIPMENTS TYPE AND IN PARTICULAR FOR THE DOUBLE PISTON EXECUTION.

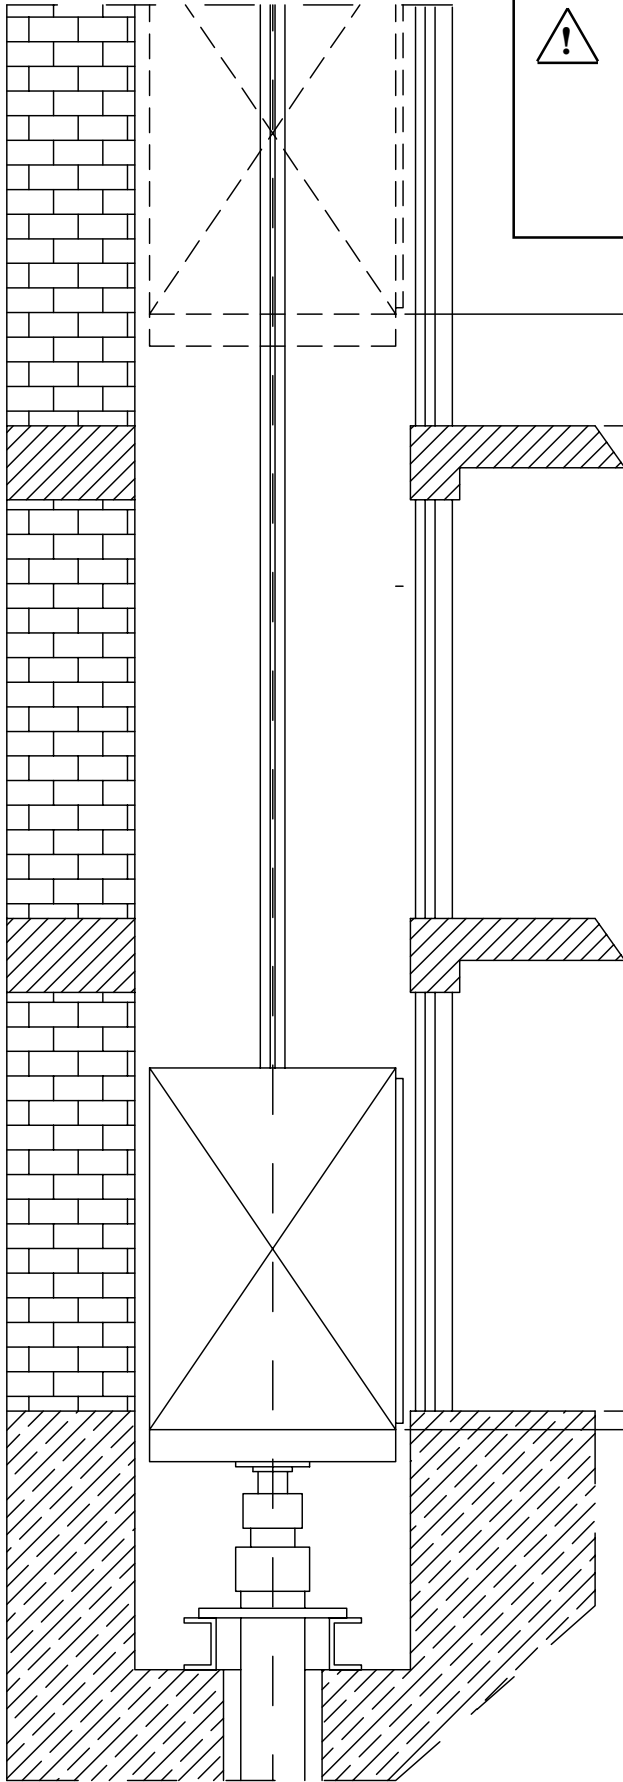

ES

ES: to be measured with **completely extended** piston

TELESCOPIC PISTONS TWO STAGES

$$ES > EI + 20 + (0.005 * \text{Cab Travel})$$

[mm]

TELESCOPIC PISTONS THREE STAGES

$$ES > (2 * EI) + 20 + (0.005 * \text{Cab Travel})$$

[mm]

FORESEE THE AUTOMATIC RETURN TO THE LOWER FLOOR

INTERNAL SEALS CHANGE

In phase of planning to foresee the possibility to extract completely the rods in safety condition to be able to replace the valves and the inside seals, which are subject to usury even if very inferior in comparison to that of the rods seals.

EI

min. 5-6 cm

EI: to be measured with **completely closed** piston (without springs and dampers)

